

# LCD2041 Technical Manual

**Revision: 2.0** 

### **Contents**

Co	ontent	ıts	ii
1	Intr	roduction	1
	1.1	What to Expect From the LCD2041	. 1
	1.2	What Not to Expect From the LCD2041	. 1
	1.3	Setup for Testing	. 1
	1.4	Trying out the LCD2041	. 2
2	Con	nnections	2
	2.1	Connector Pinout	. 2
		2.1.1 Power Connection	. 3
		2.1.2 Five Volt Modules	. 4
		2.1.3 Wide Voltage Range Modules	. 5
		2.1.4 Applying Power through the DB-9 Connector	. 6
	2.2	RS-232 Communications	. 6
		2.2.1 DB9 Connections	. 6
		2.2.2 Alternate Serial Connection	. 7
		2.2.3 TTL communications	. 8
		2.2.4 Configuring RS-232 and I <sup>2</sup> C	. 8
	2.3	I <sup>2</sup> C Communications	. 10
		2.3.1 ACK	. 10
	2.4	General Purpose Output	. 11
3	Disp	playing Text	12
	3.1	General	. 13
	3.2	The built in Character Font	. 13
	3.3	Writing Text to the Display	
	3.4	Text Commands	
		3.4.1 Auto line wrap on (254 67)	
		3.4.2 Auto line wrap off (254 68)	
		3.4.3 Auto scroll on (254 81)	
		3.4.4 Auto scroll off (254 82)	
		3.4.5 Set cursor position (254 71 [column] [row])	
		3.4.6 Send cursor home (254 72)	
		3.4.7 Turn on underline cursor (254 74)	
		3.4.8 Turn off underline cursor (254 75)	
		3.4.9 Turn on block (blinking) cursor (254 83)	
		3.4.10 Turn off block (blinking) cursor (254 84)	
		3.4.11 Cursor left (254 76)	
		3.4.12 Cursor right (254 77)	

4	Bar	Graphs	and Special Characters	16
	4.1	Comm	and List	16
		4.1.1	Initialize wide vertical bar graph (254 118)	16
		4.1.2	Initialize narrow vertical bar graph (254 115)	16
		4.1.3	Draw vertical bar graph (254 61 [column] [height])	16
		4.1.4	Initialize horizontal bar graph (254 104)	17
		4.1.5	Draw horizontal bar graph (254 124 [column] [row] [dir] [length])	17
		4.1.6	Initialize large digits (254 110)	17
		4.1.7	Place large digit 254 35 [col] [digit]	17
		4.1.8	Define custom character (254 78 [c] [8 bytes])	
5	Miso	cellaneo	us Commands	19
	5.1	Comm	and List	19
		5.1.1	Clear display (254 88)	
		5.1.2	Set contrast (254 80 [contrast])	
		5.1.3	Backlight on (254 66 [minutes])	
		5.1.4	Backlight off (254 70)	
		5.1.5	General purpose output off (254 86)	
		5.1.6	Set backlight brightness (254 153 [brightness])	
		5.1.7	General purpose output on (254 87)	
		5.1.8	Read module type	
6	App	endix: (	Command Summary	20
	6.1		d	20
	6.2		Commands	
	6.3	_	mbers	
		6.3.1	ASCII Characters	
	6.4	Text C	ommands	
	6.5		aphs and Special Characters	
	6.6		laneous Commands	
7	App	endix: S	Specifications	26
	7.1		cations	26
	7.2		S	
8	App	endix: (	Glossary	28

### 1 Introduction

The LCD2041 comes equipped with the following features;

- 20 column by 4 line text display
- Built in font with provision for up to 8 user defined characters
- Speeds from 1200 bps to a lighting fast 19.2 Kbps over RS-232
- Communication over RS-232 or I<sup>2</sup>C
- Software controlled contrast
- Backlight with configurable time out setting up to 180 minutes
- One general purpose output for a variety of applications
- Horizontal or Vertical bar graphs
- Variable power options, +5V or +8V to +15V
- Extended temperature option
- Fits Matrix Orbital's Dual PC Bay insert without any modifications

### 1.1 What to Expect From the LCD2041

The LCD2041 is designed as the display unit for an associated controller. The controller may be anything from a single board, special purpose micro-controller to a PC, depending on the application. This controller is responsible for what is displayed on the screen of the display.

The display provides a simple command structure to allow text and bar graphs to be displayed on the screen. Text fonts are built in, and use standard ASCII mapping. Provision is made for up to 8 user defined characters.

The screen is backlit for low light situations. Backlighting may be turned on or off under program control. Contrast is adjustable to compensate for differing lighting conditions and viewing angles.

A general purpose output allows the controller to switch an electronic or electro-mechanical device by issuing commands to the display unit. This can be used for controlling LEDs, relays, etc.

### 1.2 What Not to Expect From the LCD2041

The display does not include bitmap graphics capability, except that permitted by defining special characters. The display does not include a keypad interface.

### 1.3 Setup for Testing

Before setting up the application the user may want to try out the display. This is easily done with a PC. If not equipped with a dual bay PC mounting kit, the following will be required;

- A 4-pin power connector of the type used to connect 3.5" floppy drive. Take care not to connect the display to an unmodified spare power connector in a PC
- A spare RS-232 port. (Either COM1 or COM2)
- A 5V power supply. For wide voltage models, an 8 15 V supply will be required
- A 9 or 25 pin RS-232 serial cable. If using a 25 conductor cable, a 9 to 25 pin adapter will be required

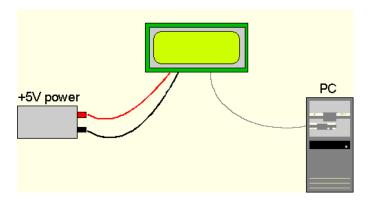


Figure 1: Connections for Testing

- 1. Refer to the Figure above for the following steps.
- 2. Wire the connector to the power supply. On most connectors the RED lead will go to +5V and the BLACK lead to GND.

**NOTE** The Manufacturer's Warranty becomes void if the unit is subjected to over-voltage or reversed polarity.

- 3. Connect the display to the PC using the serial cable and adapter if required. Make sure the RS-232 cable includes the required ground lead. There must be no voltage differential between the RS-232 ground and the power supply ground.
- 4. Connect the power connector, making sure that the +5V goes to V+. Turn on the power; the display backlight should come on and a blinking cursor at the top left should appear.

### 1.4 Trying out the LCD2041

The unit should be connected to power and the PC and backlight should be on. To experiment with typing text, run a PC program such as Display Tuner or AlphaDemo. Make sure it's configured to use the correct port. Set the baud rate to 19,200.

To exercise some of the other features of the display, a program (in any convenient language such as Basic or C) will need to be written in order to issue the required command strings. Most terminal programs are unable to issue the 0xFE character needed as a command prefix.

### 2 Connections

### 2.1 Connector Pinout

Refer to the Figure below for this chapter.



Figure 2: Electrical Connections

The display has three connectors;

Table 1: Connectors & Functions

Connector	Function
2 pin	General purpose output
4 pin	Power and I <sup>2</sup> C communication
DB-9F	RS-232/power

#### 2.1.1 Power Connection

Power is applied via pins 1 and 4. Power requirement for standard units is +5 VDC  $\pm 0.25$ V . Units with the wide voltage range option require 8 - 15 VDC.

#### **WARNINGS**



 Do not apply any power with reversed polarization. Do not apply any voltage other than the specified voltage. Do not use any cables other than the cables supplied by Matrix Orbital, unless aware of the modifications required. Do not apply voltage to the DB-9 connector AND power connector Do not apply more than +5Vdc to pin #9 on the DB-9 connector.



Figure 3: Power Connector

Table 2: Pinout Connections

Pin 4	Ground
Pin 3	SDA (I <sup>2</sup> C data) / Rx
Pin 2	SCL (I <sup>2</sup> C clock) / Tx
Pin 1	Vdc

#### 2.1.2 Five Volt Modules

If the display is used in a PC it is tempting to plug a spare power connector into the unit. **Don't do this!** Wiring for the PC power connector and that required for the display are different.

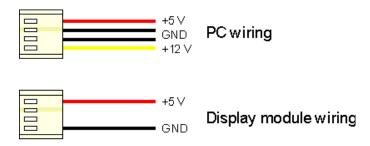


Figure 4: Wiring for 5V Modules

Matrix Orbital is equipped to supply an adapter cable designed to use with the LCD2041 when it's installed in a PC. The cable is wired as shown in the Figure below.

**NOTE** This cable does not provide connections for I<sup>2</sup>C.



Figure 5: Five Volt Power Cable

### 2.1.3 Wide Voltage Range Modules

**NOTE** Do not use this cable unless the display module has the "Wide voltage range" option. Use of the 12 volt power cable with 5 volt modules will damage the module.

The 12 volt power cable is designed for use with wide voltage range display modules mounted in a PC. Wiring required for the 12 volt power connector is shown in the Figure below.

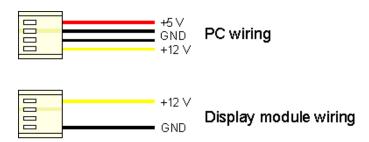


Figure 6: Wiring for 12 Volt Modules

Matrix Orbital is equipped to supply an adapter cable designed to use with the display module when it's installed in a PC. The cable is wired as shown in the Figure below.



Figure 7: Twelve Volt Power Cable

### 2.1.4 Applying Power through the DB-9 Connector

Power may be provided to the module by pin 9 of the DB-9 connector instead of through the 4-pin SIP. If power is to be applied using the DB-9, it must be a regulated 5Vdc supply.

**NOTE** This applies to wide voltage units, V and VPT extensions, as well as to standard 5 volt units.

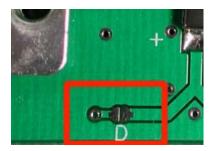


Figure 8: DB-9 Power

To use pin 9 as the power source, the user must solder the 5 volt jumper pad beside the DB-9 connector.



**WARNING** Application of a voltage to pin 9 greater than 5.25 volts may cause immediate destruction of unit and void the Manufacturer's Warranty.

#### 2.2 RS-232 Communications

The RS-232 connector on the PC cable is wired so that a standard 'straight through' 9 pin D-sub cable may be used to connect the module to a standard serial port such as COM ports on PCs. Please note that this device complies with the EIA-232 standard in that it uses signal levels from  $\pm$  12V to  $\pm$  12V and can be converted to TTL levels as well. The display is set at 19.2Kbps default speed. Other settings are;

• 8 bits, no parity, 1 stop bit.

#### 2.2.1 DB9 Connections

A standard DB-9F is provided for RS-232 communications. Power may also be supplied via this connector if desired.

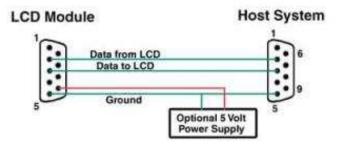


Figure 9: RS-232 and Power Connector

Table 3: RS-232 Pinout

Pin Number	Direction	Description	LCD	Host
2	Data from LCD	Data out (LCD	Tx	Rx
3	Data to LCD	Data in (LCD)	Rx	Tx
5	-	Ground	gnd	gnd

### 2.2.2 Alternate Serial Connection

An optional alternate connection header is provided to allow one cable for data and power. Two jumpers will have to be set into the RS-232 position above the DB-9 connector.



Figure 10: RS232 Configuration

Connector pinout is as follows;



Pin 4	Ground
Pin 3	Rx
Pin 2	Tx
Pin 1	Vdc

Figure 11: Power Connector

### 2.2.3 TTL communications

The display can be talked to at TTL (logic 0V to +5V) levels. The following three jumps will need to be modified as shown in figure below. This will allow TTL communications through the 4-pin SIP header or the DB9 connector.

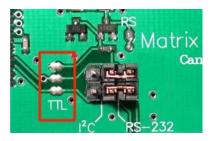


Figure 12: TTL Communications

### 2.2.4 Configuring RS-232 and I<sup>2</sup>C

RS-232 baud rate and  $I^2C$  address are configured by means of jumpers.

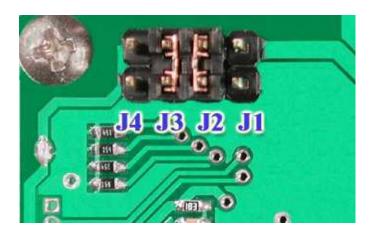


Figure 13: RS-232 Jumpers

The module is supplied with jumpers J1 and J2 installed, which gives an RS-232 baud rate of 19200 and an  $I^2C$  address of 0x5C.

- RS-232 port: J0, J1, J2 control baud rate. RS-232 format is 8N1, 8 bits, no parity, one stop bit
- I<sup>2</sup>C port: J0, J1, J2, J3 sets slave peripheral address

Table 4: Serial Baud Rates

Baud Rate	Slave Address	J3	J2	J1	J0
1200	50H	out	out	out	out
	52H	out	out	out	in
2400	54H	out	out	in	out
	56H	out	out	in	in
9600	58H	out	in	out	out
	5AH	out	in	out	in
19200	5CH	out	in	in	out
	5EH	out	in	in	in
1200	60H	in	out	out	out
	62H	in	out	out	in
2400	64H	in	out	in	out
	66H	in	out	in	in
9600	68H	in	in	out	out
	6AH	in	in	out	in
19200	6CH	in	in	in	out
	6EH	in	in	in	in

### 2.3 I<sup>2</sup>C Communications

I<sup>2</sup>C communications runs at 100Kbps and supports up to 16 units on a single communications line. The I<sup>2</sup>C data line operates on 5 volt CMOS levels.

#### 2.3.1 ACK

The idea of ACK is to indicate when the data has been received correctly. ACK does not indicate data incorrectly received. ACK simply fails to indicate when data is correctly received. Clearly, this is of limited usefulness and even less so with Matrix Orbital modules. Matrix orbital modules are not capable of failing to acknowledge an incorrectly received byte in response to that bytes transition. They are only capable of failing to acknowledge the bytes following the byte, which was not received. To fully understand the reasons for this one needs to understand something about how a Matrix Orbital module processes data. Basically the reason why a Matrix Orbital module might fail to receive a byte correctly is that it was unable to process the byte previous before the failed byte was transmitted. Because the module cannot possibly know that it would be unable to store the byte before the next byte was received it cannot know to not ACK. The reason for this situation in deference to situations one might be familiar with (i.e., memory chips, etc) is that the Matrix Orbital module employs a micro-processor to perform these data storage functions. A memory chip takes care of these things entirely with in hardware subsystems that operate at the same speed as the transmission themselves.

The display uses a standard Phillips 7bit address as defined by Phillips. However, Matrix Orbital specifies  $I^2C$  address in 8bits. The 8th bit, or least significant bit, LSB or Low Order Bit of the 8bit address is a read / write bit. If we take a standard Phillips 7bit address of 45hex this would be in binary, 1000101. This is 7bits. Matrix Orbital would describe the Phillips  $I^2C$  address of 45hex as 8Ahex. The read address would be 8Bhex.

For more information on Phillips I<sup>2</sup>C please visit;

http://www.ping.be/~ping0751/i2cfaq/i2cindex.htm

And for more information specific to our displays visit;

http://www.lcdforums.com/forums/viewtopic.phpt=910

To communicate by I<sup>2</sup>C two jumpers have to be set into the I<sup>2</sup>C position above the DB-9 connector.

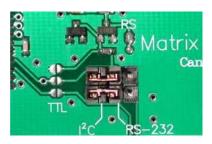


Figure 14: I<sup>2</sup>C Communications

Connector pinout is as follows;



Pin 4	Ground
Pin 3	SDA (1 <sup>2</sup> C Data)
Pin 2	SLC (I <sup>2</sup> C Clock)
Pin 1	Vdc

Figure 15: Power Connector

### 2.4 General Purpose Output

The display has a general purpose output which can be used to control relays or other electronic devices. This allows external devices to be turned on or off using your PC or controller and software commands. The + terminal is connected to the module positive supply, the - terminal is connected through a 240ohm current limiting resistor and the electronic switch to ground.

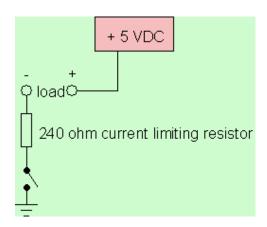


Figure 16: General Purpose Output

Maximum allowable current is 20mA, which is enforced by the current limiting resistor. If the device being switched has a resistance of 240ohms or more the corresponding resistor may be shorted. Solder a small jumper wire or wirewrap wire between the two feed through holes.

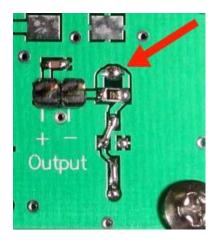


Figure 17: Bypassing 240 ohm Resistor

**NOTE** The GPOs do not have any over current or over / under voltage protection so care must be taken when using them. For instance if the external device is a relay it must be fully clamped using a diode and capacitor to absorb any generated back electro-motive force or "EMF".

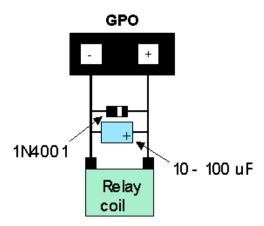


Figure 18: Clamping a Relay

### 3 Displaying Text

This chapter describes the various text-display commands in detail. Before issuing commands to the LCD2041 please read sections 6.2 and 6.3.

### 3.1 General

Text is displayed on the display using the built in 5x7 dot matrix font, in addition to up to 8 user defined characters.

### 3.2 The built in Character Font

The display includes a built in 5x7 dot matrix font with the full range of ASCII characters plus a variety of extended characters, as shown in the Figure below.

				D7	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1
				D6	0	0	0	0	1	1	1	1	0	0	0	0	1	1	1	11
				D5 D4	0	0	1 0	1	0	0	0	1	0	0	1 0	1	0	0	1	
D3	na	D4	<b>D</b> A	-	0	+	2	3	4	5	6	7	8	9	A	В	C	<u> </u>	E	F
6	0	0	0	0	۳	屵	ŕ	ा	1		•	0.	r	-	Ĥ		ः	:::	ं	p
$\vdash$	0	<u> </u>	1	1	Н	$\vdash$	1	7					Н	Н	Н	7	÷.	-		_
0	_	_	_	-	_	$\vdash$	::			***		역	H	_	III T			<u>:</u> .		្ប
0	0	1	0	2		L		2		K	b	<u></u>		L		1	!!!	×	Ë	₿
0	0	1	1	3		L	#	3	<u>.</u>	5	្	⊆.			:	ņ	Ţ	₩	Ē	æ
0	1	0	0	4			\$	4	٥		୍ର	‡				I		†?	ä.	Ω
0	1	0	1	5			1.7		E		⊜				#	7	÷	1	¥:i	ü
0	1	1	0	6			ં:	6	<u> </u>	Ų	í	ः			ij	Ħ		=	<u> </u>	$\Xi$
0	1	1	1	7			."	7	G	W		Ų.			. <del></del> ;	#	;;;;	÷	ij	M
1	0	0	0	8			(	ូ	H	X	H	×			.4	9	7	Ņ		$\overline{X}$
1	0	0	1	9			)	9		Ÿ		_::			::::	Ť	,!	11.	:	;
1	0	1	0	A			*	×	J	Z	٠٣٠,	H			Ξ.		i			#
1	0	1	1	В				;	K		K	**			7†	#			×	Ħ
1	1	0	0	С			;	<	<u>!</u>	#					+	=,	7	7	*	
1	1	0	1	D				::::	M	]	m	•				Z	٠,	<u></u> ,	1	- <u>÷</u> -
1	1	1	0	Ε			::	>	ŀ·i	^	i"i	÷			=	Ė	:†:		Ë	
1	1	1	1	F			1	?			<u></u> i	÷				Ų	Ţ	:::	៉	

Figure 19: Character Set

In addition to the built in characters, users may define up to 8 special characters which, once defined, occupy positions 0x00 to 0x07 in the above chart. The display does not have provision to download other

### 3.3 Writing Text to the Display

When the display receives a character, it displays that character at the position currently defined. The next character sent to the module then advances to the following position on the display. Characters are drawn using the built in font, and only characters defined in the font are actually displayed. Characters that are not defined by the built in font print as a space. The position where text is to be inserted is a character location stored in the display's volatile memory and maintained internally by the display's firmware. This position is manipulated by the commands shown in the following section.

### 3.4 Text Commands

In this section commands are identified by their names and decimal values.

### 3.4.1 Auto line wrap on (254 67)

Enables automatic line wrapping. This is not 'word wrapping' and wraps may occur in the middle of a word. If auto line wrap and auto scroll are both off (default) text will wrap from line 1 to line 3 then 2 then 4. Factory default is OFF.

#### 3.4.2 Auto line wrap off (254 68)

Disables automatic line wrapping.

#### 3.4.3 Auto scroll on (254 81)

When auto scrolling is on the display shifts the entire display's contents up to make room for a new line of text when the text reaches the scroll position at the bottom right character position.

#### 3.4.4 Auto scroll off (254 82)

When auto scrolling is disabled, text will wrap to the top left corner of the display area. Existing text in the display area is not erased before new text is placed. A series of 'spaces' followed by a "Cursor home" command may be used to erase the top line of text.

### 3.4.5 Set cursor position (254 71 [column] [row])

This command sets the cursor position (text insertion point) to the [column] and [row] specified. Columns have values from 1 to 20 (0x01 to 0x14) and rows have values of 1 to 4 (0x01 to 0x04).

### 3.4.6 Send cursor home (254 72)

This command moves the cursor position (text insertion point) to the top left of the display area.

### 3.4.7 Turn on underline cursor (254 74)

Turns on the underline cursor. The cursor shows the current text insertion point. Both underline and blinking cursors may be turned on or off independently. The cursor is off by default.

### 3.4.8 Turn off underline cursor (254 75)

Turns off the underline cursor. Does not affect the blinking block cursor.

### 3.4.9 Turn on block (blinking) cursor (254 83)

Turns on the blinking block cursor. The cursor shows the current text insertion point. Both blinking and underline cursors may be turned on or off independently. The cursor is off by default.

### 3.4.10 Turn off block (blinking) cursor (254 84)

Turns off the blinking block cursor. Does not affect the underline cursor.

#### 3.4.11 Cursor left (254 76)

Moves the cursor one position to the left but does not erase any character that may be in that position. Note that this command moves the text insertion point even if the cursor is turned off.

**NOTE** A 'destructive backspace' which erases the character to the left of the original position, may be done by issuing the following sequence: cursor left, space, cursor left.

### 3.4.12 Cursor right (254 77)

Moves the cursor one position to the right but does not erase any character that may be in that position. This command moves the text insertion point even if the cursor is turned off.

### 4 Bar Graphs and Special Characters

The display includes the ability to draw bar graphs, either horizontally or vertically, large numbers, and allows users to define up to eight special characters. Eight characters (ASCII values 0x00 to 0x07) are set aside for use with bar graphs, user defined characters, and large digits. Since the same 8 characters are used for each function, the functions may not be used simultaneously. The characters may be defined or redefined at any time by issuing the commands shown in this section. Once defined, they may be used either by means of the bar graph commands, or by simply issuing one of the ASCII values 0x00 to 0x07 which is not prefixed by the command byte, 254.

#### 4.1 Command List

### 4.1.1 Initialize wide vertical bar graph (254 118)

This command defines the 8 special / user characters to be blocks suitable for use in drawing wide vertical bar graphs, such as 5 pixels. Any previously existing definitions will be lost. Once this command has been issued, any number of vertical bar graphs may be drawn unless the characters are redefined by another command.

### 4.1.2 Initialize narrow vertical bar graph (254 115)

This command defines the 8 special / user characters to be blocks suitable for use in drawing narrow vertical bar graphs, such as 2 pixels. Any previously existing definitions will be lost. Once this command has been issued, any number of vertical bar graphs may be drawn unless the characters are re-defined by another command.

### 4.1.3 Draw vertical bar graph (254 61 [column] [height])

Draws a vertical bar graph in [column] having a height of [height] pixels. The height may range from 0 to 20 (0x00 to 0x14) pixels. The necessary characters must first be initialized by either of the commands shown in section 5.1.1 or 5.1.2, which will determine the width of the graph drawn. Graph may be erased by drawing a bar graph of height = 0 in the same column.

### 4.1.4 Initialize horizontal bar graph (254 104)

This command defines the 8 special / user characters to be blocks suitable for use in drawing horizontal bar graphs. Any previously existing definitions will be lost. Once this command has been issued, any number of horizontal bar graphs may be drawn unless the characters are redefined by another command.

### 4.1.5 Draw horizontal bar graph (254 124 [column] [row] [dir] [length])

Draws a horizontal bar graph in [row] starting at [column] with a length of [length] pixels. [row] may have a value of 0x01 or 0x02, column may range from 0x01 to 0x14 and length may be from 0x00 to 0x64 (0 to 100) if the graph can extend the full width of the screen. Each column is 5 pixels wide, as spaces between the columns don't count.

[dir] specifies the direction: 0x00 goes from left to right, 0x01 goes from right to left.

### 4.1.6 Initialize large digits (254 110)

This command defines the 8 special / user characters to be blocks suitable for use in drawing large digits. Any previously existing definitions will be lost. Once this command has been issued, any number of large characters may be placed until the characters are redefined by another command.

### 4.1.7 Place large digit 254 35 [col] [digit]

This command allows the large digits to be drawn on the display screen. Numbers of almost full display height may be placed along side regular text on four row displays. The column number has a maximum value which is less than the display width because the digits are all three columns wide.

Before using this command the "Initialize large digits" command must be issued to define the blocks necessary to make up the digits. If regular text and large digits are mixed on one screen, the user should always set the display cursor position before placing regular text because the creation of a large digit will leave the cursor position to the bottom right of the large digit and not at the last regular text write position.

[col] can have values from 0x01 to 0x12 (1 to 18). [digit] has values from 0x00 to 0x09 (0 to 9).

### 4.1.8 Define custom character (254 78 [c] [8 bytes])

The display allows up to 8 user defined 'custom' characters. These characters occupy the first 8 (0x00 to 0x07) places in the character set.

Custom characters occupy a 5x8 pixel matrix. Built in characters are 5x7: the bottom row of pixels is normally reserved for the underline cursor. The underline cursor should be turned off if the bottom row of pixels forms part of a custom character.

The characters are defined by issuing the command 254 78 [c] followed by 8 bytes to define the character. [c] is the character number (0x00 to 0x07). The 8 bytes are mapped as shown below;

Table 5: 8 Byte Map

	MSB LSB											
*	*	*	1	2	3	4	5	Data Byte 1				
*	*	*	6	7	8	9	10	Data Byte 2				
*	*	*	11	12	13	14	15	Data Byte 3				
*	*	*	16	17	18	19	20	Data Byte 4				
*	*	*	21	22	23	24	25	Data Byte 5				
*	*	*	26	27	28	29	30	Data Byte 6				
*	*	*	31	32	33	34	35	Data Byte 7				
*	*	*	36	37	38	39	40	Data Byte 8				

A "1" bit indicates an on (black) pixel, a "0" bit indicates an off (clear) pixel.

Once defined, a character is displayed simply by issuing a value (0x00 to 0x07) corresponding to the character number. The character will be laid out as follows;

Table 6: Character Values

1	2	3	4	5
6	7	8	9	10
11	12	13	14	15
16	17	18	19	20
21	22	23	24	25
26	27	28	29	30
31	32	33	34	35
36	37	38	39	40
	Cui	rsor I	ine	

**NOTE** Custom characters will be erased if any of the "Initialize bar graph" commands are issued.

#### Example of a degree symbol;

```
txUart.sendByte(0xFE); //command prefix
txUart.sendByte('N'); //custom character command
txUart.sendByte(0x00); //custom character value 0-7
txUart.sendByte(12); //8 bytes to create
txUart.sendByte(18); //the custom character
txUart.sendByte(18);
txUart.sendByte(12);
txUart.sendByte(0);
txUart.sendByte(0);
```

```
txUart.sendByte(0);
txUart.sendByte(0x00); //display custom character 0
```

### 5 Miscellaneous Commands

The commands listed in this chapter don't readily fit in any of the other categories, or are used in more than one category.

### 5.1 Command List

### 5.1.1 Clear display (254 88)

This command clears the display and resets the text insertion point to the top left of the screen.

### 5.1.2 Set contrast (254 80 [contrast])

This command sets the display's contrast to [contrast], where [contrast] is a value between 0x00 and 0xFF (between 0 and 255). Lower values cause 'on' elements in the display area to appear lighter, while higher values cause 'on' elements to appear darker. Lighting conditions will affect the actual value used for optimal viewing. Individual display modules will also differ slightly from each other in appearance. In addition, values for optimal viewing while the display backlight is on may differ from values used when backlight is off.

### 5.1.3 Backlight on (254 66 [minutes])

This command turns on the backlight for a time of [minutes] minutes. If [minutes] is zero (0), the backlight will remain on indefinitely. The factory default for backlight is on.

#### 5.1.4 Backlight off (254 70)

This command turns the backlight of the display off.

### 5.1.5 General purpose output off (254 86)

This command turns OFF any of the general purpose outputs. [gpo #] is 1 to 8. Please note that OFF means the GPO pin floats (high impedance).

### 5.1.6 Set backlight brightness (254 153 [brightness])

This command sets the display's brightness to [brightness], where [brightness] is a value between 0x00 and 0xFF (between 0 and 255). The higher the number is, the brighter the backlight will appear.

### 5.1.7 General purpose output on (254 87)

This command turns ON the general purpose output. ON means that the output is pulled low or, ground via 240ohms.

### 5.1.8 Read module type

This command will return, over the RS-232 interface in TTL levels only, the model type value of the module. This command returns a 1-byte hex value. Values for various modules at the time of this publication are as follows;

LCD0821 - 0x01 LCD2021 - 0x03 LCD2041 - 0x05 LCD4041 - 0x07 LK202-25 - 0x08 LK204-25 - 0x09 LK404-55 - 0x0A VFD2021 - 0x0B VFD2041 - 0x0C VK204-25PC - 0x0E VK204-25 - 0x0F GLC12232 - 0x10 GLK24064-25 - 0x15 GLK12232-25 - 0x22 GLC24064 - 0x13 LK404-AT - 0x31 LK402-12 - 0x33 LK162-12 - 0x34

Table 7: Module Values

### 6 Appendix; Command Summary

#### 6.1 General

The operation of the display is controlled by a simple and consistent command set. Commands control;

- Text
- Display graphics
- Display keypad interface
- Miscellaneous operating parameters

### 6.2 Issuing Commands

Commands are issued to the display by the controller. In a test setup, commands can be issued to the display by means of a BASIC program, using the chr\$() function. In the tables below, we've shown

commands in hex, ASCII and decimal form. All commands begin with the prefix character 0xFE (254 decimal). These commands are issued on the serial communications link (I<sup>2</sup>C or RS-232) at the currently defined baud rate.

For example (using BASIC in a test setup), the user could issue the command to clear the screen on the display by including the line:

```
PRINT#1,chr$(254);chr$(88)
in the BASIC program.

ZComm1->WriteCommByte(0xfe);
ZComm1->WriteCommByte('X');
```

### 6.3 On Numbers

Like all computerized devices, the display operates with commands and values in the form of binary numbers. These binary numbers are arranged in 8 digit (i.e., 8 bit) groups called bytes. The decimal value of a byte may have any value from 0 to 255. Bytes are usually specified in either decimal or hexadecimal (base 16) form for convenience, since binary numbers are confusing to deal with directly. Hexadecimal (hex) numbers are particularly convenient because exactly two hexadecimal digits make up one byte, each hex digit representing 4 binary digits (4 bits) as shown here;

Binary	Hex	Decimal	Binary	Hex	Decimal
0000	0	0	1000	8	8
0001	1	1	1001	9	9
0010	2	2	1010	A	10
0011	3	3	1011	В	11
0100	4	4	1100	С	12
0101	5	5	1101	D	13
0110	6	6	1110	Е	14
0111	7	7	1111	F	15

Table 8: Hex Value Table

Based on the table, the byte 01001011 can be represented in hex as 4B, which is usually written as any of 4Bh, 4B hex or 0x4B. The numbers can also be expressed in decimal form if preferred.

#### 6.3.1 ASCII Characters

Since computers deal internally with numbers only, but externally with both letters and numbers, several schemes were developed to 'map' written characters to numeric values. One such scheme has become universal, the American Standard Code for Information Interchange, or ASCII. ASCII tables are readily available from a number of sources. A few examples will do here;

Table 9: Example of an ASCII Table

Letter/ Number	Decimal Value	Hex Value
A	65	41
a	97	61
0	48	30
9	57	39

This gives rise to the possibility of confusion when parameters are being set on the display. For example, the GPO ON and OFF commands use a number to indicate which GPO is being controlled. We're told that acceptable values are 0 to 8. All such parameters must use numeric values (i.e., the actual byte values). If we send the ASCII number 0 by mistake it will actually give the value 48 decimal (30 hex) to the parameter, which is wrong.

In the tables given in the following sections ASCII characters are shown as 'A', with single quotes.

### 6.4 Text Commands

Syntax in the tables below is given in hex, decimal and decimal with ASCII, in that order, one per line.

Table 10: Text Commands

Command	Syntax	Default	Notes
Auto line wrap on	FE 43	off	Enables line
	254 67		wrapping (not
	254°C'		word wrap).
Auto line wrap off	FE 44	off	Disables line
	254 68		wrapping.
	254 'D'		
Auto scroll on	FE 51	off	Enables scroll at
	254 81		bottom of screen.
	254 'Q'		Text will push
			display up one
			line to make room
			for new line.
Auto scroll off	FE 52	off	Disables auto
	254 82		scroll. Text will
	254 'R'		wrap to top left
			and overwrite
			existing text.

Command	Syntax	Default	Notes
Set cursor position	FE 47 [col][row]	n/a	Moves cursor
	254 71 [col][row]		to the specified
	254 'G' [col][row]		column and row.
			The cursor marks
			the text insertion
			point in this and
			all commands.
Send cursor home	FE 48	n/a	This command
	254 72		moves the cursor
	254 'H'		to the top left of
			the display area.
Underline cursor on	FE 4A	off	Turns on the un-
	254 74		derline cursor.
	254 'J'		
Underline cursor off	FE 4B		Turns off the un-
	254 75		derline cursor.
	254 'K'		
Block cursor on	FE 53	off	Turns on the
	254 83		blinking block
	254 'S'		cursor.
Block cursor off	FE 54		Turns off the
	254 84		blinking block
	254 'T'		cursor.
Cursor left	FE 4C	n/a	Moves the cur-
	254 76		sor one position
	254 'L'		to the left. If the
			cursor is already
			at the beginning
			of a line it will
			move to the end
			of the other line.
Cursor right	FE 4D	n/a	Moves the cur-
	254 77		sor one position
	254 'M'		to the right. If the
			cursor is already
			at the end of a line
			it will move to the
			beginning of the
			other line.

### 6.5 Bar Graphs and Special Characters

The commands in this section are used to define and display bar graphs and special characters.

Table 12: Bar Graph and Special Character Commands

Command	Syntax	Notes
Initialize thick vertical bar	FE 76	Initializes the user character set to
graph	254 118	make wide vertical bar graphs.
	254 'v'	
Initialize thin vertical bar	FE 73	Initializes the user character set to
graph	254 115	make narrow vertical bar graphs.
	254 's'	
Initialize horizontal bar	FE 68	Initializes the user character set to
graph	254 104	make horizontal bar graphs.
	254 'h'	
Draw vertical bar graph	FE 3D [col][length]	Draws a vertical bar graph at column
	254 61 [col][length]	[col] of length [length]. Length is
	254 '=' [col][length]	measured in pixels (0x00 to 0x14).
		User must first use the 'v' or 's'
		command to initialize characters.
	FE 7C [c][r][d][length]	Draws a horizontal bar graph start-
	254 124 [c][r][d][length]	ing at column [c] on row [r] with di-
	254 'l' [c][r][d][length]	rection [d] (0 is right, 1 is left) of
		length [length]. Length is measured
		in pixels (0x00 to 0x64 if starting in
		column 1). User must first use the
		'h' command to initialize characters.
	FE 6E	Initializes the user character set to
	254 110	make large digits.
	254 'n'	
7.1 Specifications	FE 23 [col] [digit]	Place large digit number [digit] in
	254 23 [col] [digit]	column [col] of the display. Cursor
	254 '#' [col] [digit]	moves to bottom right of large digit.
		[digit] is 0x00 to 0x09, [col] is 0x01
		to 0x12 (i.e. 1 to 18 decimal).
	FE 4E [c][8 bytes]	Defines one of 8 custom "user" char-
	254 78 [c][8 bytes]	acters. Character number is [c] be-
	254 'N' [c][8 bytes]	tween 0x00 and 0x07.

### 6.6 Miscellaneous Commands

Table 14: Miscellaneous Commands

Command	Syntax	Default	Notes
Clear display	FE 58	n/a	Clears screen of
	254 88		text and graphics,
	254 'X'		places text cursor
			at top left.
Set contrast	FE 50 [contrast]	0x80128	Sets display con-
	254 80 [contrast]		trast. Compen-
	254 'P' [contrast]		sates for viewing
			angle. Contrast
			is a value between
			0 and 255 (hex 0
			to FF). Larger =
			darker.
Backlight on	FE 42 [minutes]	on	Backlight will
	254 66 [minutes]		stay on for [min-
	254 'B' [minutes]		utes]. If [minutes]
			= 0 backlight
			will stay on
			permanently.
Backlight off	FE 46	on	Turns off back-
	254 70		light.
	254 'F'		
General purpose output off	FE 56 [gpo #]	off	Turns general
	254 86 [gpo #]		purpose output
	254 'V' [gpo #]		OFF.
General purpose output on	FE 57 [gpo #]	off	Turns general
	254 87 [gpo #]		purpose output
	254 'W' [gpo #]		ON.
Read module type	FE 37	see table	This command re-
	254 55		turns a 1-byte hex
	254 '7'		value.

## 7 Appendix: Specifications

### 7.1 Specifications

Table 16: Environmental Specifications

	Standard Temperature	Extended Temperature
Operating Temperature	$0^{\circ}$ C to +50°C	-20°C to +70°C
Storage Temperature	-20°C to +70°C	-40°C to +85°C
Operating Relative Humidity	90% max non-condensing	90% max non-condensing

Table 17: Electrical Specifications

Supply Voltage	4.75 - 5.25 Vdc (optional 8 - 15 VDC)
Supply Current	11 mA typical
Supply Backlight Current	90 mA typical

Table 18: Optical Characteristics

Number of Characters	80 (20 characters by 4 lines)
Matrix format	5 x 7 with underline
Display Area	76.3 x 25.20 mm XxY
Character Size	2.95 x 4.75 mm (XxY), not including underline
Character Pitch	3.55 mm
Line pitch	5.35 mm
Dot Size	0.55 x 0.55 mm (XxY)
Dot Pitch	0.60 x 0.60 mm (XxY)
LED Backlight Life	100,000 hours typical
Color of Illumination	Yellow Green

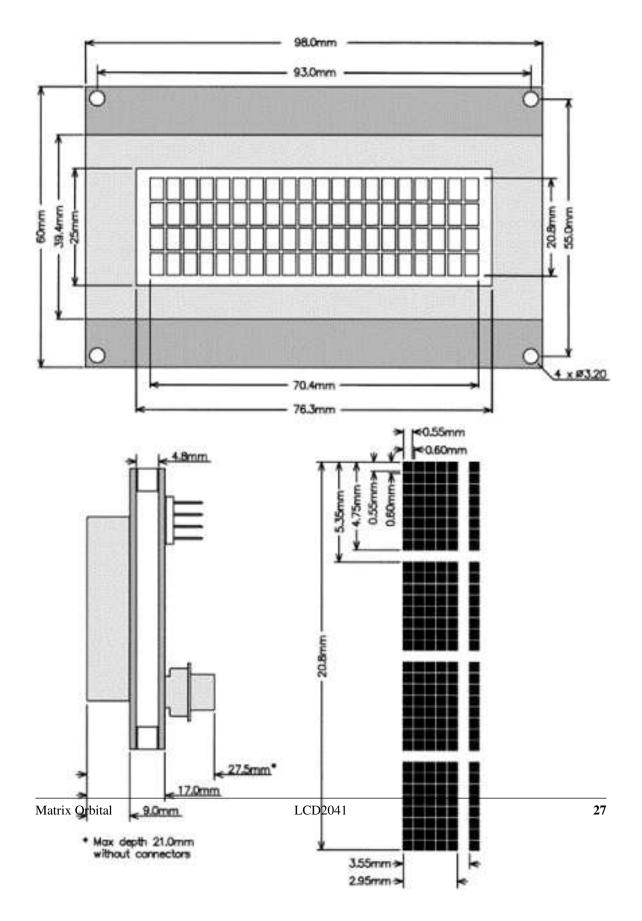


Figure 20: Physical Layout

### 7.2 Options

Table 19: Options Available on LCD2041

Inverse Blue LCD WB	
Inverse Yellow LCD	
White backlight with Gray glass (Ice Blue)	
Extended Temperature	
Wide Voltage	
Wide Voltage with Efficient Switching Power Supply	

# 8 Appendix: Glossary

Table 20: Appendix: Glossary

ASCII	American Standard Code for Information Interchange.	
	A 7 bit binary code representing the English alpha-	
	bet, decimal numbers and common punctuation marks.	
	Also includes control characters such as carriage re-	
	turn or end of text. An 8 bit superset of the standard	
	ASCII codes is often used today to include foreign	
	characters and other symbols. These supersets are of-	
	ten called extended ASCII character sets.	
Backlight	A backlit display is illuminated from behind to provide	
	nighttime and improved daytime readability.	
Baud Rate	The (data and signaling) bit transmission rate of an RS-	
	232 device.	
Binary Number	A number written using binary notation, which only	
	uses zeros and ones	
Bit	The smallest unit of information a computer can work	
	with. Each bit is either 0 or 1. Binary digit.	
Bitmap	A representation, consisting of rows and columns of	
	dots, of a graphics image in computer memory. The	
	value of each dot, whether it is filled in or not, is stored	
	in one or more bits of data.	
Byte	A grouping of eight binary bits	
CCFL	Cold Cathode Fluorescent Lamp. A high brightness	
	backlighting source consists of a fluorescent tube pow-	
	ered by a high voltage A.C. source.	

Configuration	The way a system is set up, or the assortment of com-
	ponents that make up the system. Configuration can
	refer to either hardware or software, or the combina-
	tion of both.
Contrast	The ratio of luminance between the light state of the
	display to the dark state of the display.
Controller	The micro-controller or PC used to control the Matrix
	Orbital display unit
DB-9	The designation of a connector used in the RS-232 in-
	terface: 9 pin connector
Firmware	Software (programs or data) that has been written onto
	read-only memory (ROM). Firmware is a combina-
	tion of software and hardware. ROMs, PROMs and
	EPROMs and flash EEPROMs that have data or pro-
	grams recorded on them are firmware.
Font	A design for a set of characters. A font is the combina-
	tion of typeface and other qualities, such as size, pitch,
	and spacing.
Font Metric	A definition of where font is to be placed, such as mar-
	gins and spacing between characters and lines.
Hexadecimal	Refers to the base-16 number system, which consists
	of 16 unique symbols: the numbers 0 to 9 and the let-
	ters A to F. For example, the decimal number 15 is
	represented as F in the hexadecimal numbering sys-
	tem. The hexadecimal system is useful because it can
	represent every byte (8 bits) as two consecutive hex-
	adecimal digits. It is easier for humans to read hex-
	adecimal numbers than binary numbers.
I <sup>2</sup> C	Short for Inter-IC, a type of bus designed by Phillip's
	Semiconductors in the early 1980s, which is used to
	connect integrated circuits (I <sup>2</sup> Cs). I <sup>2</sup> C is a multi-
	master bus, which means that multiple chips can be
	connected to the same bus and each one can act as a
	master by initiating a data transfer.
Interface	A means by which two systems interact.
LCD	Liquid Crystal Display
Module Type Value	This refers to the model number of the module.
Pixel	The smallest individually controllable element of a
	display.
Pre-Generated Fonts	Pre-determined fonts which can be downloaded into
	graphic liquid crystal displays.

Primitive	A low-level object or operation from which higher-	
	level, more complex objects and operations can be	
	constructed. In graphics, primitives are basic elements,	
	such as lines, curves, and polygons, which you can	
	combine to create more complex graphical images	
RS-232	Short for recommended standard-232C, a standard in-	
	terface approved by the Electronic Industries Associa-	
	tion (EIA) for connecting serial devices.	
Scroll	To view consecutive lines of data on the display screen.	
	The term scroll means that once the screen is full, each	
	new line appears at the bottom edge of the screen and	
	all other lines move up one position.	
Serial Number	A number that is one of a series and is used for identi-	
	fication of the module	
Serial Port	A port, or interface, that can be used for serial commu-	
	nication, in which only 1 bit is transmitted at a time.	
Version Number	This refers to the firmware revision number of the	
	module.	
Volatile Memory	Temporary memory. Once the power supply is turned	
	off volatile memory is then erased.	